

ROSCO Vapour Plus Spare Parts

No.	Item No.	Description
1	23782220A003	Handle, Rosco Vapour
2	23783330J001	Cover, Rosco Vapour Plus
3	23783330J002	Bottle cradle assy, 5L, Rosco Vapour Plus (Includes feet - No. 14)
3	23783330J003	Bottle cradle assy, 4L, Rosco Vapour Plus (Includes feet - No. 14)
4	23783330F002	Fluid line assy, 5L, Rosco Vapour Plus (Includes No's 5/6)
4	23783330F003	Fluid line assy, 4L, Rosco Vapour Plus (Includes No's 5/6)
5	23782220F007	Filter, inline 1/8-1/8 barb
6	23782220F008	Clunk weight
7	23782220E007	DMX interface, Rosco Vapour Series
8	23782220E012	PCBA Filter (230v only)
9	23783330E240	PCB, Rosco Vapour Plus, 230V, tested (Includes No's 10/11)
9	23783330E110	PCB, Rosco Vapour Plus, 120V, tested (Includes No's 10/11) (100V also)
10	23711900E020	Fuse 10A 20mm (230V only)
10	23783330E005	Fuse 16AT 5 x 20mm (100V/120V only)
11	23782220E011	Fuse 3.15 AT, I*It=226.5
12	23782220E006	Remote, Rosco Vapour Series
13	23783330A002	Handle, flush pull, Vapour Plus
14	23782220A002	Rubber foot
15	23783330E003	Fuseholder 20mm chassis mount (230V only)
15	23783330E002	Fuse holder 1 1/4 chas mount (100V/120V only)
16	23711900E020	Fuse 10A 20mm (230V only)
16	23783330E005	Fuse 15A 1 1/4 x 1/4 (100V/120V only)
17	23782220E001	Mains switch 2 pole Rev A
18	224199020102	B/head adaptor, plastic, 6mm-6mm push-in
19	23783330H240	Heat Ex Assy + fit, 230V Rosco Vapour Plus (Includes No's 20/24/27)
19	23783330H110	Heat Ex Assy + fit, 120V Rosco Vapour Plus (Includes No's 20/24/27) (100V/120V only)
20	23782220E004	Thermal fuse DM150H horizontal
21	23783330F004	Pipetta EP for piston pump
22	23782220F240	Piston Pump 240V / 50Hz (230V only)
22	23782220F120	Piston pump 120v/60hz (120V only)
22	23782220F100	Pump 100v 50/60hz ep5 (100V only)
23	23783330F005	Adaptor, Tee 1/8/1/8/18 brass
24	23783330F001	Elbow adaptor 1/8BSP-3/16 comp
25	23782220F010	Valve non return, 1/8-1/8BSP, male
26	23782220F011	Elbow 1/8BSP, female-6mm fast-on
27	23782220E004	Thermostat 350DEG C manual reset

